



HEADLIGHT

Music Production House

www.headlight.com.hk

Rm.708, 7/F, MyLoft,
9 Hoi Wing Road,
Tuen Mun, N.T., HKG
email: info@headlight.com.hk

Gibson Les Paul The Jimmy Page Signature Model

User Manual

The electronic parts feature a 3-way toggle switch, four push-pull potentiometers, shielding paint and a specially designed circuit. It offers totally 21 different sounds by modifying the wiring configuration of two pickups and phasing of one of them. The switching can be done by just pulling or pushing the potentiometers.

When the pickup selector switch in *neck* position

Neck Volume	Neck Tone	Bridge Volume	Bridge Tone	Coils-in-use	Configuration	Phase	Sound Description
				Neck Humbucker	Normal	Normal	hot, bright
UP				Neck Screw Coil	Normal	Normal	fat, clean
UP	UP			Neck Slug Coil	Normal	Normal	thin, clean

When the pickup selector switch in *middle* position

Neck Volume	Neck Tone	Bridge Volume	Bridge Tone	Coils-in-use	Configuration	Phase	Sound Description
				Neck Humbucker Bridge Humbucker	Parallel	IN	hot, fat, clean
			UP	Neck Humbucker Bridge Humbucker	Normal	OUT	fat, clean
		UP		Neck Screw Coil Bridge Humbucker	Normal	IN	thin, clean
	UP			Neck Humbucker Bridge Humbucker	Series	OUT	hot, thin, mid-rangy, good for lead wah
UP				Neck Humbucker Bridge Slug Coil	Parallel	IN	dark, fat clean
		UP	UP	Neck Slug Coil Bridge Humbucker	Parallel	OUT	sweet thin
	UP		UP	Neck Humbucker Bridge Humbucker	Series	IN	very hot, good for very leading part
UP			UP	Neck Humbucker Bridge Slug Coil	Parallel	OUT	warm, thin
	UP	UP		Neck Screw Coil Bridge Humbucker	Series	OUT	
UP		UP		Neck Screw Coil Bridge Slug Coil	Parallel	IN	
UP	UP			Neck Humbucker Bridge Screw Coil	Series	OUT	very thin and mid rangy
	UP	UP	UP	Neck Slug Coil Bridge Humbucker	Series	IN	
UP	UP	UP		Neck Screw Coil Bridge Screw Coil	Series	OUT	very sharp, thin
UP		UP	UP	Neck Slug Coil Bridge Slug Coil	Parallel	OUT	
UP	UP		UP	Neck Humbucker Bridge Screw Coil	Series	IN	
UP	UP	UP	UP	Neck Slug Coil Bridge Screw Coil			just like a Humbucker, tone colour between neck and bridge pickup

When the pickup selector switch in *bridge* position

Neck Volume	Neck Tone	Bridge Volume	Bridge Tone	Coils-in-use	Configuration	Phase	Sound Description
				Bridge Humbucker	Normal	Normal	
		UP		Bridge Slug Coil	Normal	Normal	
		UP	UP	Bridge Slug Coil	Normal	Normal	